



"FIVE AND SIX SPEED CONVERSION SPECIALISTS"

MD-910-1003 Ford T-5 Mounted External Slave Cylinder SBF Installation Instructions



Read These Instructions Completely Before Beginning

These instructions are for an external hydraulic slave cylinder installation for a T-5 transmission for a Small Block Ford using a Fox body T-5 aluminum bellhousing or QuickTime 6060,6065,6063 Fox body clutch fork/lever.

1.0 Tools and Notes

1.1 10mm, 1/2", 9/16" & 15/16" wrenches and/or socket/ratchet.

1.2 Safety Equipment – Always wear ANSI approved safety goggles/glasses when working with metal and fluids. Wear proper gloves when working with hot surfaces and corrosive fluids.

1.3 The Slave cylinder mounts aft of the clutch lever, pushing the clutch lever forward. You do not need to change your fox body clutch lever.


1.4 Our mock-up bell housing and transmission have certain items removed for clarity.

2.0 Disassembly

2.1 This step applies to a vehicle with either mechanical linkage or clutch cable. If your vehicle already has a hydraulic system (master cylinder) this step does not apply. Remove all clutch linkage from the pedal and bell housing. If the stock pedal is equipped with the clutch pedal spring, carefully remove spring by loosening the pedal hanger bracket. Failure to remove the spring will cause the pedal to NOT return.

3.0 Installation


3.1 Always wear ANSI approved safety goggles/glasses when working with metal. The bracket mounts to the bottom side of the transmission tabs. Position the bracket on the driver's side of the transmission and install (2) new bolts and self-locking nuts. **Do not add washers or spacers.**

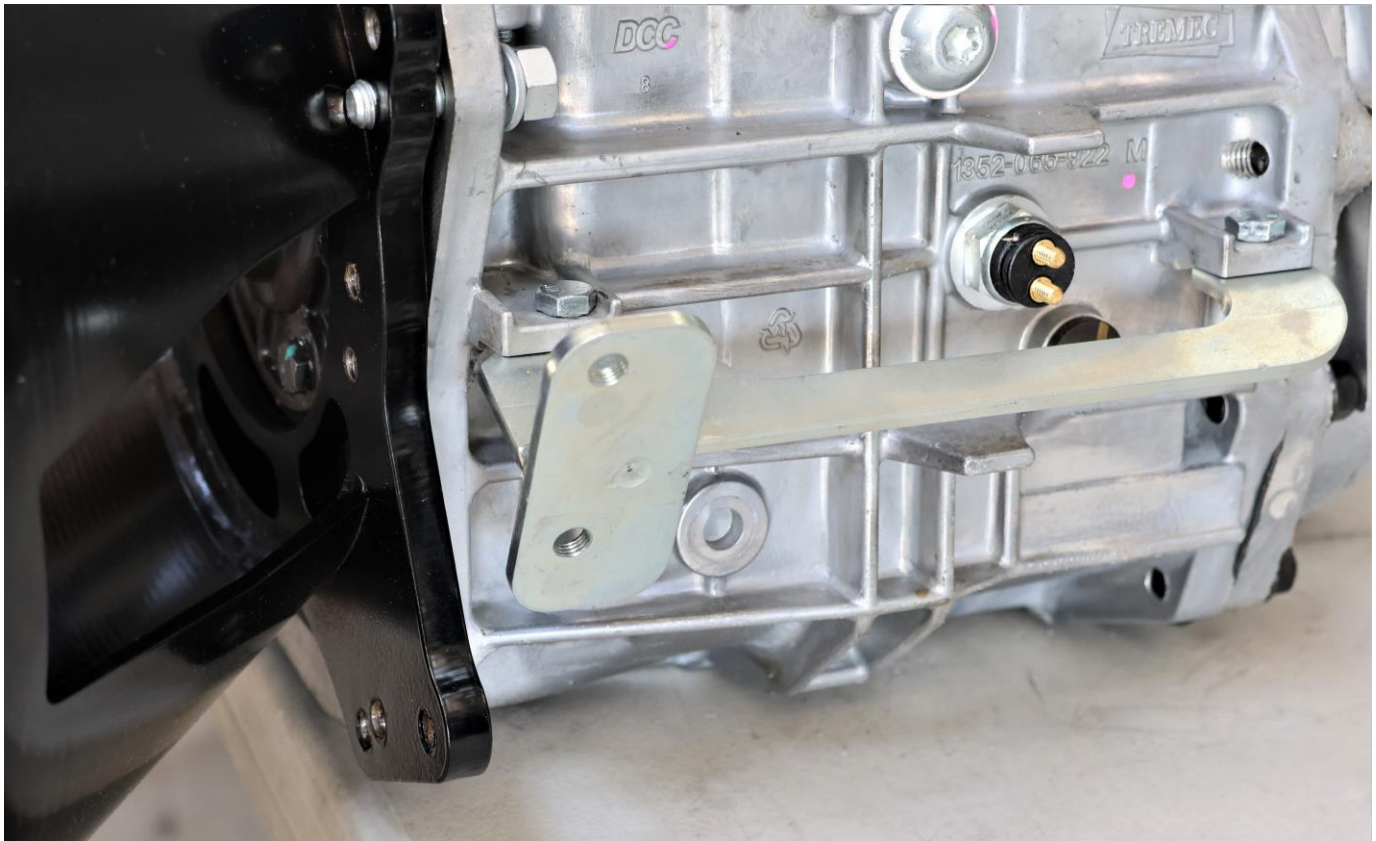

3.2 Install the socket on the aft side of the clutch lever in the inner hole and install the nut and lock washer on the front side and tighten using a 15/16" socket/wrench.

3.3 Verify that the back edge for the fork is about 1" from the back edge of the bellhousing. Add a lock washer to the non adjustable pivot stud if fork is greater than 1". For QuickTime bell housings, adjustable pivot to the required height and lock jam tight to bellhousing.

3.4 Install the push rod into the slave cylinder and install the slave cylinder on the two mounting holes of the bracket and tighten 3/8" bolts and lock washers.

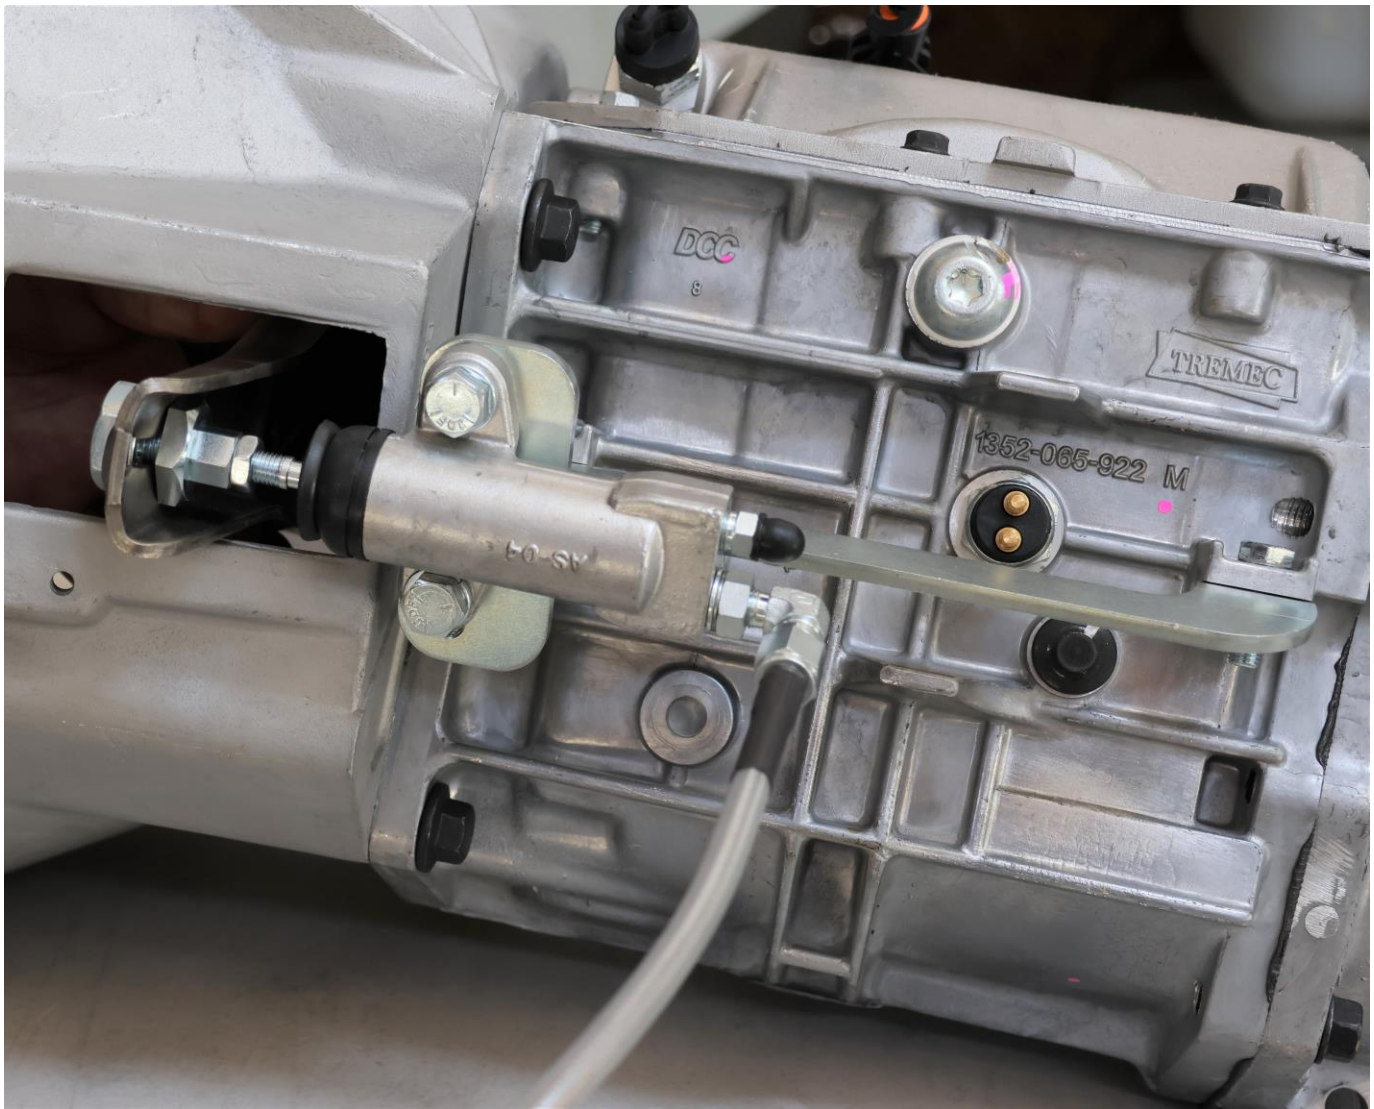

- 3.5 Set-Up: Open the bleed port. **Push the piston completely to the bottom of the piston bore AND make sure the throw-out bearing is in contact with the clutch pressure plate.** Adjust the convex nut on push rod to take out any slack/gap between the convex nut and socket (zero lash) then tighten the jam nut against the convex nut. **Caution: Do not leave a gap between the throw-out bearing and the clutch diaphragm** – that is old-school. Throw-out bearings designed today are made to have contact (not pressure) full-time. Leaving a gap will result in slave cylinder piston leaving the housing and may cause damage.
- 3.6 Attach steel braided line to the slave cylinder fitting and master cylinder fitting. Tighten hose end fittings. Make sure the steel braided line does not interfere with any moving parts and is at least 2” away from the exhaust. Rotate the 90-degree fittings on the master cylinder and slave cylinder as required to accomplish required clearances and tighten jam nuts on both master cylinder and slave cylinder. Do not over tighten.
- 3.7 Modern Driveline offers a hydraulic clutch system “bleeder kit”. The bleeder kit comes standard in all Modern Driveline master cylinder kits, and is also available separately as a purchase item. The one-person bleeder kit is made ONLY for reservoirs with a round opening measuring between 1.30” & 1.55” in diameter. DOT 3 or 4 brake fluid only.

- 3.8 Important: Once your new hydraulic system is active, **the rod coming out of the slave cylinder should travel 1.2"**. Less than 1.2" may result in a clutch that does not release properly. This assumes the clutch releases about .4" at the bearing. The slave cylinder push rod should move immediately when the pedal is pressed. **Lack of immediate movement or a spongy feeling clutch pedal indicates air is still in the system.**
- 3.9 Periodic adjustment is required for this system. In the initial set-up above, the convex nut was adjusted for zero lash. When the clutch starts to release higher than it used to, repeat the process outlined in the set-up step above to obtain zero lash. This periodic adjustment will extend clutch life and throw-out bearing life by eliminating preload and premature wear. Once again, make sure the piston is bottomed out in the bore and the throw-out bearing is contacting the pressure plate when making any adjustments.
- 3.10 Further assistance and tech support is available by calling Modern Driveline at 208-453-9800 M-F 8-5 Mountain time. Email – Tech@ModernDriveline.com . Please contact us first for any issues.

See our library of tech video at <https://www.moderndriveline.com/category/videos/hydraulic-clutch-kits-videos/>

Enjoy your new hydraulic system and Thank You for choosing Modern Driveline. We appreciate your business.

